

# OPERATING MANUEL

Model : **DX-ELS**  
LEVEL SWITCH

**enSim**  
SENSORS

Information in this manual is reviewed and completely reliable. Responsibility is not assumed due to any typing error. Products in this manual are available only for information purpose and they may be changed without notice.



Models :  
**DX-ELS**

CE  
2284



## Important Notes:

### Used Symbols :












: Caution



: Note



: Disposal

-  Please read this manual carefully before installation of the **level switch**. User is responsible for accidents and losses arising from failure to comply with the warnings in this manual.
-  In the event that **level switch** is broken, take measures in order to prevent accidents and losses which can occur in its system.
-  There is not any fuse and circuit breaker on the instrument; they should have been added to the system by the user.
-  This manual should be stored in an easily accessible place for subsequent use.
-  The manufacturer's liability cannot exceed the purchase price of the device according to the law.
-  Do not make any modification on the instrument and do not try to repair it. Reparation should be made by authorized service staff.
-  Do not operate the system before making assembly in compliance with the assembly chart related to the instrument.
-  Products which do not contain label and serial number are considered to be excluded from the warranty scope.
-  The instrument's useful life, determined and announced by the ministry, is 10 years.

## Table of Contents :

1.	General Information.....	2
2.	Installation .....	7
3.	Failure Detection.....	17
4.	Disassembly of Instrument .....	17
5.	Service .....	17
6.	Recalibration.....	17
7.	Repair.....	17
8.	Disposal .....	17
9.	Terms of Warranty .....	17
10.	Terms of Return .....	17

## 1. General Information :

### 1.1. Material Acceptance

Check that there is no damage on the packages during the transportation immediately after the material acceptance. If packages are damaged, open the packages immediately and check whether products are affected or not, if there is any damage, send your complaint report to the transporter company and its photocopy to the address of our company.

### 1.2. Information about Areas of Use

**Level Switch is designed for industrial plants. It should never be used in mines. Otherwise, the responsibility of the manufacturer is eliminated.**

Tank level measurement and control, boiler control, store room control..

Yacht water level control, sewage level control.

Hydraulic oil tank level measurement and control

#### Advantages:


- \*A variety of materials according to the flow
- \*Different choices of ignition
- \*Quick delivery
- \*Different types of technics

**Ambient Conditions:**      **Relative Humidity:** 0-98 % RH      **Ambient temperature:** 60 °C      (It is not used under -20 °C)

### 1.3. Working Principle


In the float when the magnet magnetic area moves according to the liquid in the tube, then the reed switches the electrical circuit on or off when it reaches the level of the sensor. The changes of the reed sensors with alarm or a level information can be assessable with a relay circuit or a control device. The advantages of providing the analog output in the enclosure are preferred by the users.

### 1.4. Reed Relay and Operation Conditions

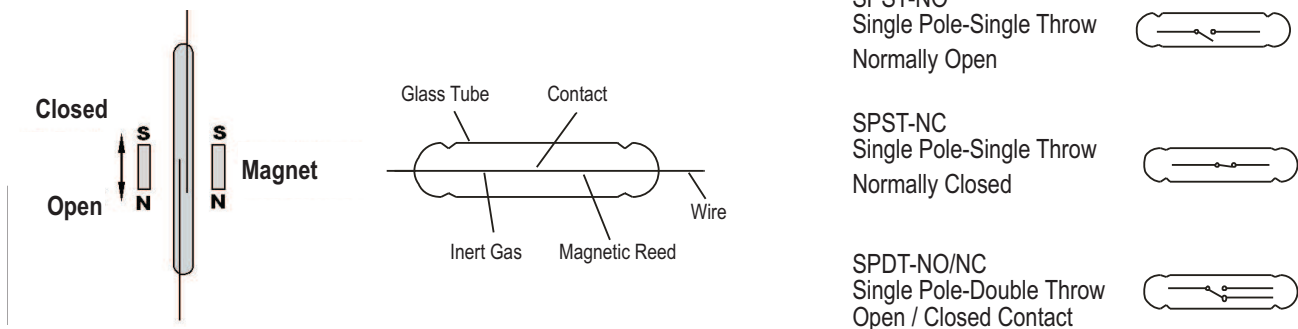


#### Inductive Load

When reed switch is used for loads such as electromagnetic relay, contactor or solenoid, reed switch may be exposed to very high voltage depending on value of inductive load. This causes either failure of switch or shortening its service life. Therefore, it is recommended to be used as follows depending on used voltage, for the purpose of protection of switch.

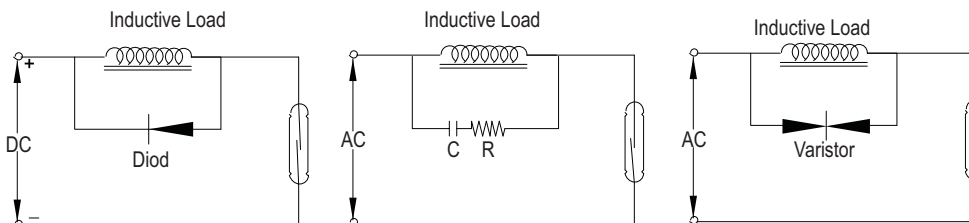

#### Capacitive Load

When reed switch is used with capacitive load, it may cause that high current passes over reed switch, depending on value of capacity during Charge -'96 Discharge of capacity. So this may cause failure of switch. It is recommended to be used as follows depending on used voltage, for the purpose of protection of switch.

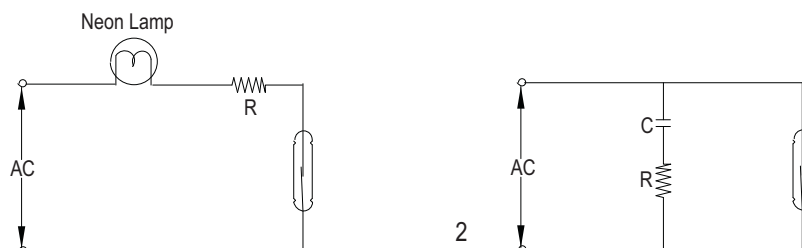

## 1.5. Technical Specifications and Material Knowledge

### Certification



II 1/2G Ex db ia IIC T6...T2 Ga/Gb For Gas


II 1/2D Ex tb ia IIC T85°C...T300°C Da/Db For Dust

\*Have a look at the temperature class chart.

### DX-ELS






Working Temperature (Tp)	Max. 125 °C
Ambient Humidity	0-98 % Rh (Non-condensing)
Ambient Temperature (Ta)	(-) 20 °C ... (+) 60 °C
Material	304 St.St. (Std.) Opt. 316 St.St. , Aluminum
Connection	Aluminium Injection - AISi12Fe (Std)
Housing	Black (RAL 9005)
Float	316 St.St. (Std.) Opt. PU , PP
Pipe	304 St.St. (Std.) Opt. 316 St.St. , Brass
Connection	2" BSP (Std.) Opt.Selectable from Table.
Float Type	S40A (Std.) , Selectable from Table.
Number of Float	1 ( Std.) A large number of available.
Stem Length	Max. 2500 mm <b>(Thread Included)</b>
Electrical Connection	Terminals
Cable and Plug Entry	M20 x 1,5 (Std)
Number of contacts	2 x SPST - NA (Std.) Opt. It can be added.
Contact Current	1,5 Amper (Std.)
Max. Contact Current	50 W / VA veya 20 W / VA
Max. Supply Voltage	30/200 VDC / 240 VAC (Std.) Opt. Selectable.
Protection Class	IP 66/68 (EN60529)
Certifications and Approvals	CE Declaration , EMC , LVD , ATEX

### Example of application :

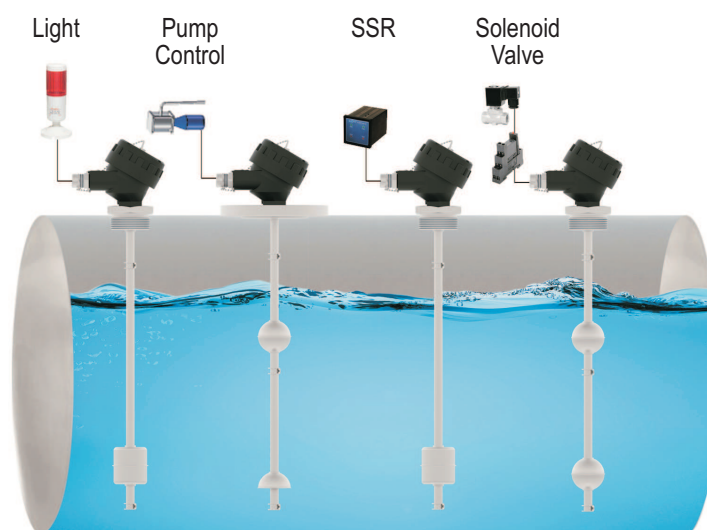

## 1.6. Label Information :

### Product Label

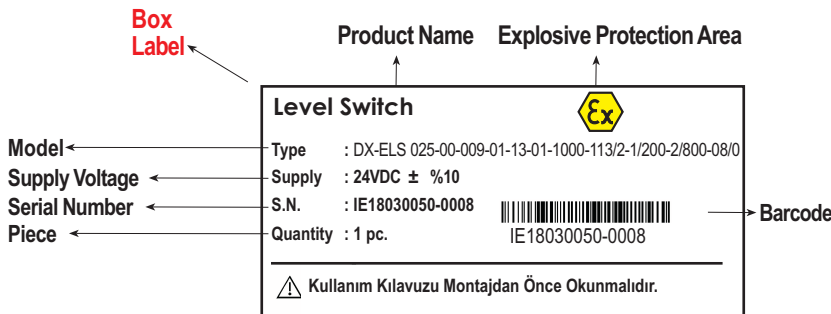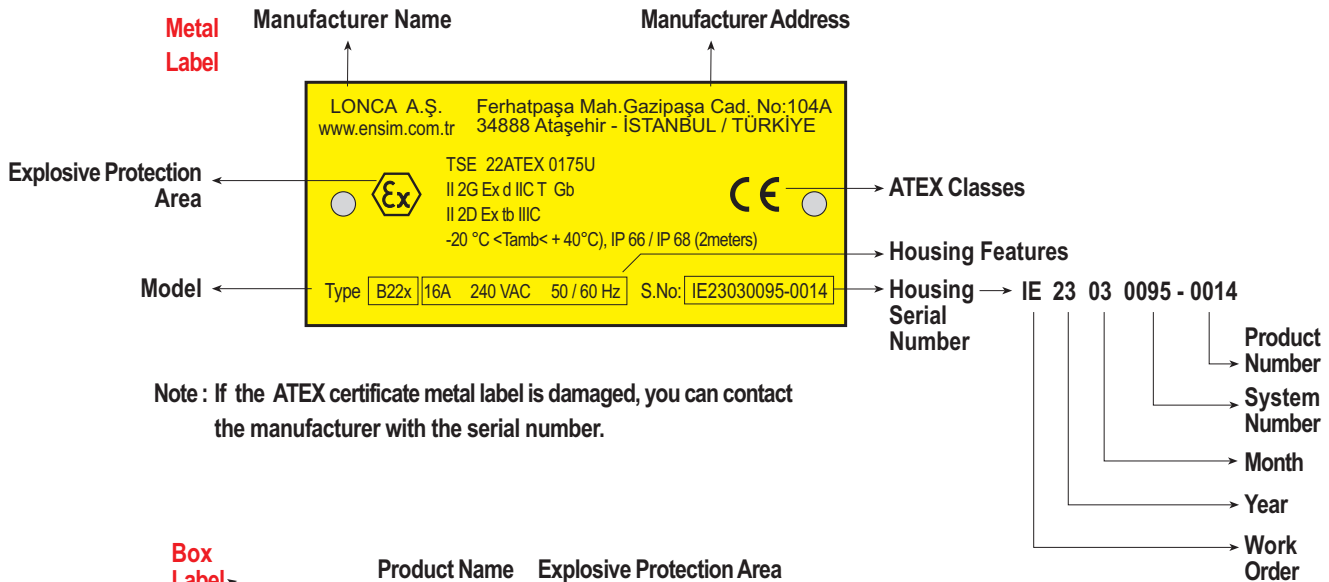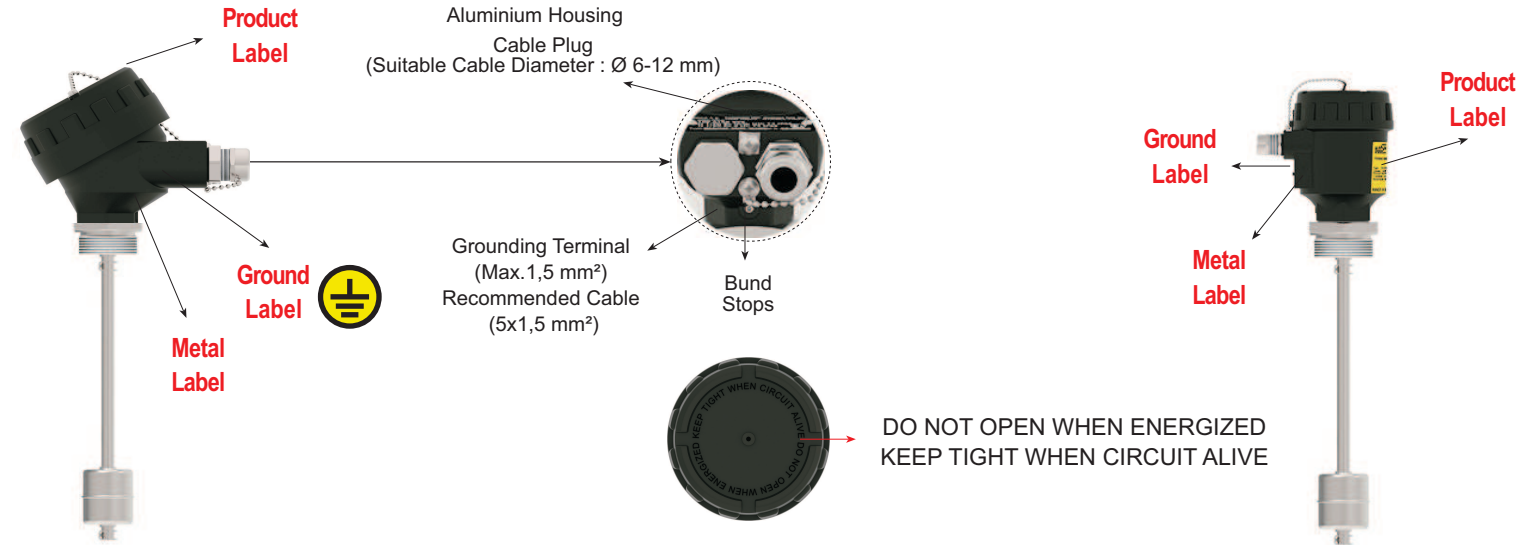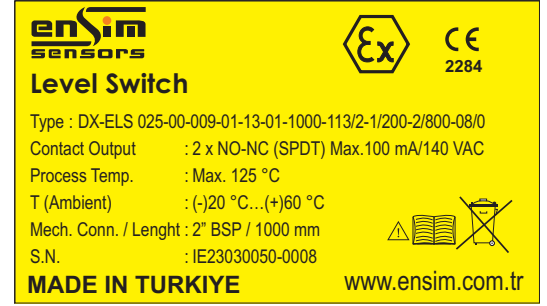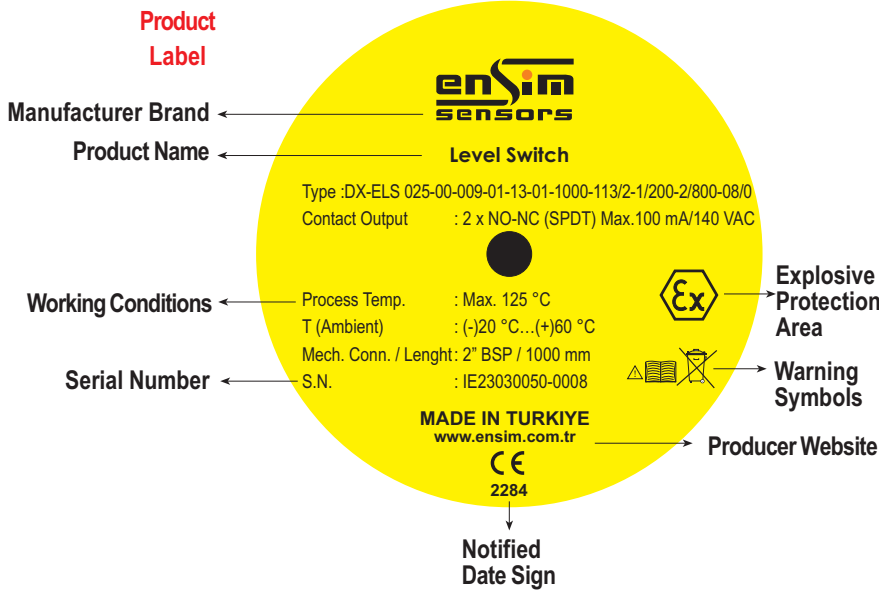

## 1.7. Package and package contents :

Please check whether you have taken delivery of below listed content completely or not and check its conformity with criterions in your order:

**\*Float Level Switch**

**\*This operating manual**



**Std. Package**

## 1.8. Target Group

This operating manual has been prepared for qualified technical personnel.

## 1.9. Certifications and Approvals

CE	:	It shows that, product meets required conditions of EU with CE stamp and stipulate that product passed quality assessment stages
ATEX (2014 / 34 / AB)	:	TS EN IEC 60079 - 0 : 2018 TS EN 60079 - 1 : 2014 TS EN 60079 - 11 : 2012 TS EN 60079 - 31 : 2014
LVD (2014 / 35 / AB)	:	TS EN 60204 -1 : 2018
EMC (2014 / 108 / AT)	:	TS EN 61326 - 1 : 2021 TS 3033 EN 60529 : 2014

**Note :** All the features and tests on this document has manufactured with **DX-ELS** models at LONCA Inc.



## 1.10. Safety Instructions (ATEX)



**Safety instructions should be read and applied to the end.**

- The following notes must be taken into attention to protect the operator and the environment from possible hazards.
- The device setup and maintenance of this device must be done by knowledgeable persons who have read the instructions and is familiar with the safety at work.
- It should be checked by the users that the products are fitted suitable to the zone maps.
- Work safety must be observed by accident prevention regulations and national installation standards.
- The product should be used within the specification presented guideline.
- You can only mount the device when there is no pressure.
- These safety instructions are protected in terms of 1 / 2 D and 1 / 1 G category for **DX-ELS** coded series and is compatible with IEP23ATEX1210X and CE certificate.
- The Label should be used in appropriate environments.
- Because the environment is max. 60 °C you should choose a suitable cable for use.
- Do not over tighten the cable gland in order not to affect the IP protection class.
- Make sure the cable entry and plug is tightened right.
- Ground connection must be done properly and checked without energizing.
- Before starting use make sure the lid is fully closed and the set screw is tightened.
- DX-ELS** models are metal protected. It is compatible with different supply voltages specified in the catalog.
- The metal enclosure must be in the 2D or 2G zone. **The pipe and float** section must be located in the 1D and 1G zone.
- Max. working temperature, max. Surface temperature can change depending on the model, Please read the document carefully before using.
- During the mounting it should be checked that there is no mechanical stress or deformation in the tank wall. When this happens, the sensor should not be energized without the necessary correction measures.
- Check that the pressure in the tank has not exceeded the pressure shown in the catalog.
- The mounting sensor must be mounted properly in the tank filling system. In case it is not suitable, the sensor must be protected and the in-tank apparatus must be protected.
- Flange surface smoothness must be maintained in flanged connection.
- Flange seating surface should not be scratched, and suitable liquid gasket should be used instead of sealing with gasket in counter flange mounting.
- Flanged connections are welded with the sensor part.
- The sensor is designed to withstand the chemical effects of the materials. Check the suitability of different materials.
- The Sensors are in suitable storage conditions and protected from dust and damp.
- Device repairs should only be done at the manufacturer Lonca Inc.
- Protect the device from friction and cleaning should be done without water.
- In case of improper circuit conditions, the main energy must be completely disconnected and safety measures should be taken without replacing the temperature circuit breaker with its backup. Changes should be made in a safe area.

1.11. ATEX Marking Sample Description

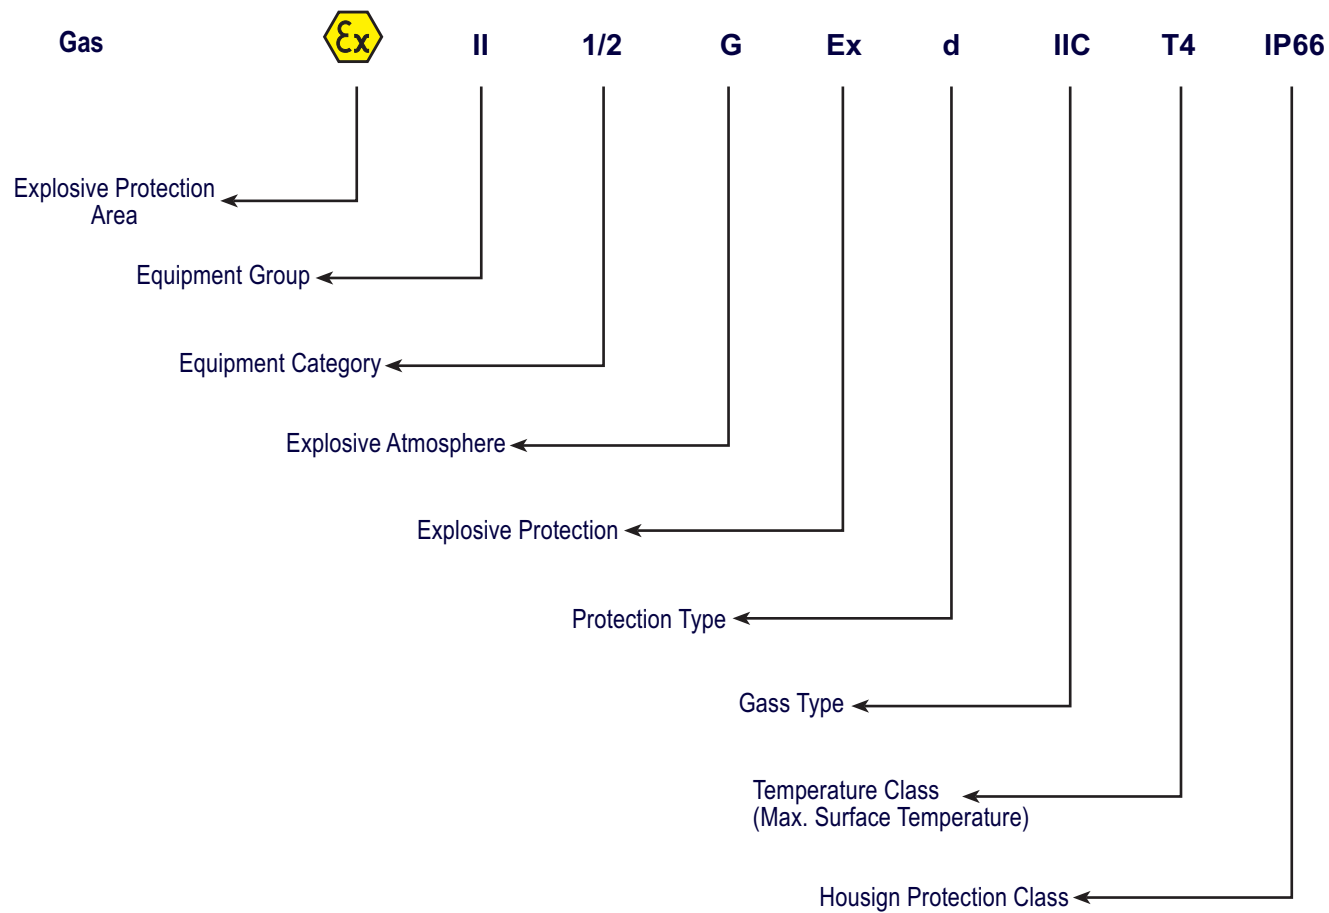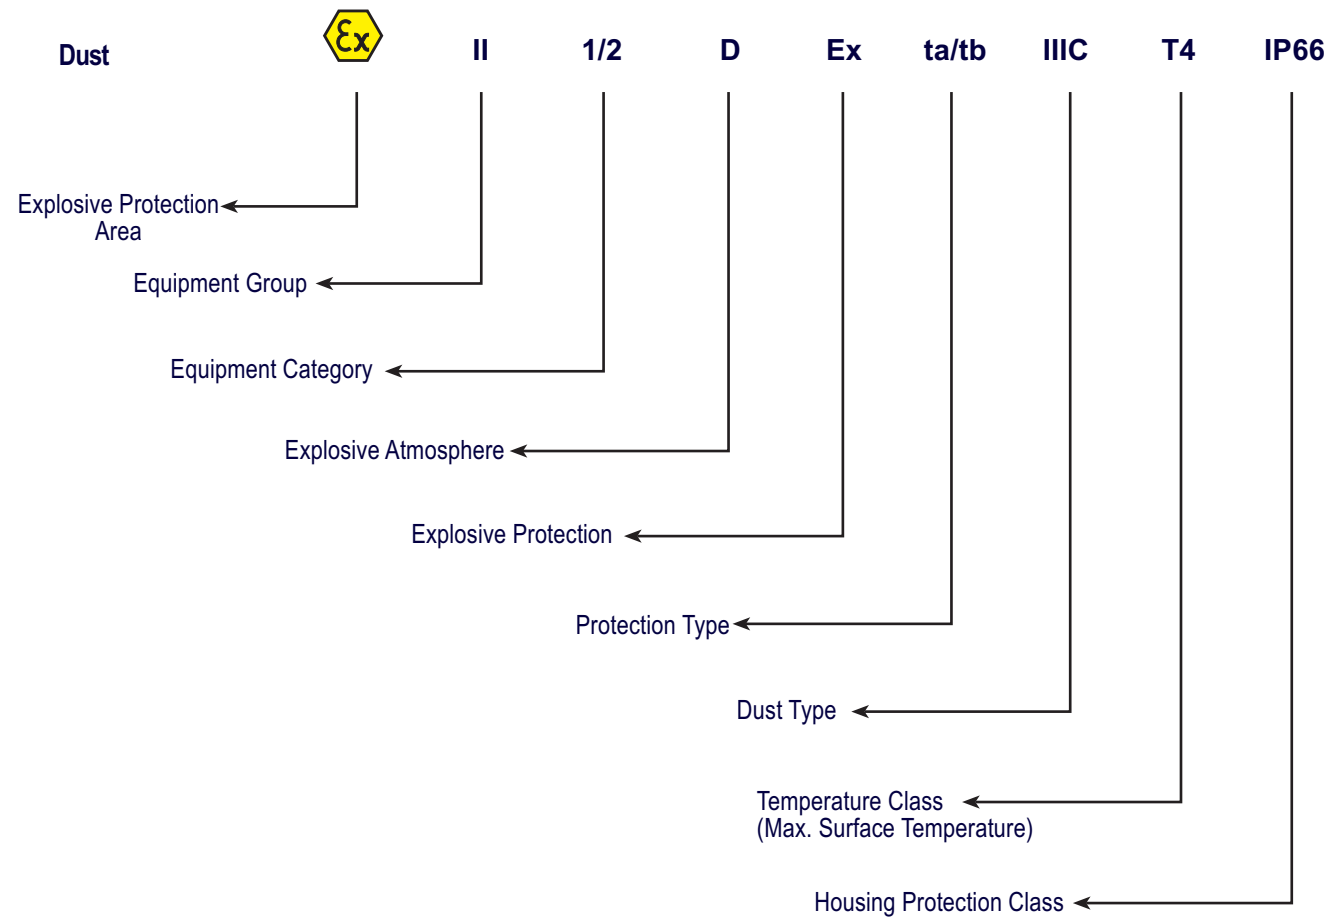

## 2. Installation :

### 2.1. General Notes :

The device installation is in 2014 / 34 / EU criteria to ensure the safety of atmosphere and people from explosions, must only be done by staff who knows the safeguards.

Do not apply force to the instrument during the installation!

Do not use the **Level switch** with a greater pressure than recommended pressure.

Do not forget that instrument is precise, carry it carefully and prevent not to be damaged.

It should be guaranteed that there are not any magnetic particles.

The Max. working pressure should not be exceeded.

### 2.2. General Installation Stages

\*Remove **Level switch** from the box carefully

\*Check whether gasket is appropriate for fluid or not. If is not appropriate, contact with the producer.

\*Then, apply below mentioned explanations according to structure of the design.

### 2.3. Special Notes

\*Please ensure that there is no mechanical stress on the shaft following installation. Such case will cause slipping in the characteristic curve.

\***Level switch** must be placed upright or horizontal.

\*Allocate valve certainly in the process connection while instrument is used.

\*Allocate blowdown valve under bottom flange for blowdown.

\*If instrument is mounted outside and if there is any danger of lightning or excessive pressure, take preventive measures by taking necessary measures.

\*In the operating conditions, **Level switch** may be hot according

to situation of fluid, in this case, do not touch the indicator, otherwise your skin is damaged.

\*The grounding product must be done properly. (can be done outside or in housing)

### 2.4. Installation For Mechanical Connections

\*Use appropriate O-Ring or gasket for tightness.

\*Ensure that its surface is clean and smooth.


\*Assemble the instrument manually.

\*Connect the contacts as shown in the figure.

(For G1" max. 20 Nm, G 1 1/4", for G" 1 1/2" max. 30Nm)

### 2.5. Mechanic Connections :


#### Thread (Connection has been welded with sensor)

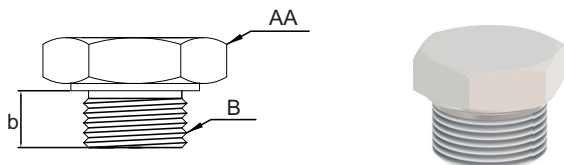

(ISO228-1)

Order Code	Dimension B	Hex [mm]	Stem Length b [mm]
0003	3/8"BSP	50	20
0004	1/2"BSP	50	14
0005	3/4"BSP	50	14
0006	1"BSP	50	23
0008	1 1/4"BSP	50	23
0009	1 1/2"BSP	60	23
0012	2"BSP	70	23

#### Flanged (Connection has been welded with sensor)

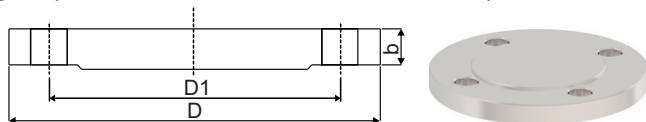

(ISO1092-1)


Order Code	PN 16	D (mm)	D1 (mm)	b (mm)
0502	DN25	165	85	16
0503	DN32	140	100	16
0505	DN50	165	125	18
0507	DN80	200	160	20
0508	DN100	220	180	20

Order Code	(ISO1092-1) PN 40	D (mm)	D1 (mm)	b (mm)
0702	DN25	115	85	18
0703	DN32	140	100	20
0705	DN50	165	125	20
0707	DN80	200	160	20
0708	DN100	235	190	24

(ANSI B16.5)

Order Code	150 LBS	D (mm)	D1 (mm)	b (mm)
1005	DN50	152,4	121	19
1006	DN65	177,8	139,7	22,2
1007	DN80	190,5	152,4	23,8
1008	DN100	228,6	157,2	23,8


#### Clamp (Connection has been welded with sensor)



(ISO2852)

Order Code	Dimension	Dia. D (mm)	b (mm)
1501	DN32	50,5	15
1502	DN50	64	17
1503	DN65	91	17

#### Dairy (Connection has been welded with sensor)

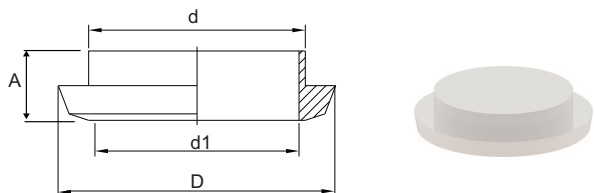

Order


Code	Dimension	Dimension	D (mm)	d1 (mm)	A (mm)
1600	DN40	DN40	56	48	13
1601	DN50	DN50	68	61	14
1602	DN100	DN100	121	114	20

2.6. Example Mounting Types :

Test Rod :

Rod Material	304 St.St. (Std.) Opt. 316 St.St.
Shaft Material	304 St.St. (Std.) Opt. 316 St.St.

It is produced as a spring.As an optional it can be inside housing.

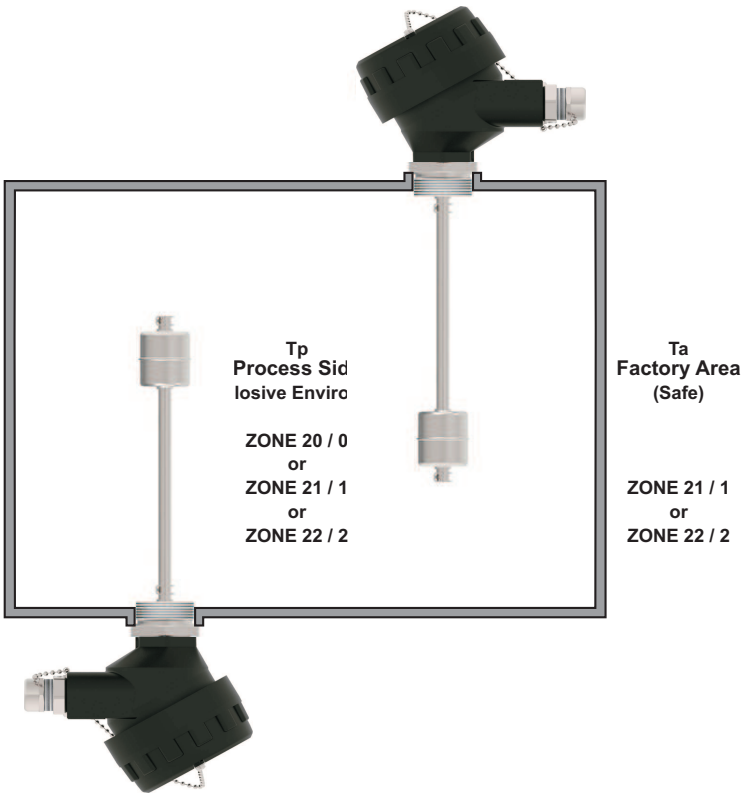


Housing :

ORDER CODE	TYPE	MATERIAL	PROTECTION CLASS	TEMPERATURE (°C)	SIZE a x b (mm)
750	B22x	Aluminium	IP 66 /68	(-) 40...(+) 200	117 x 102
704	B21x	Aluminium	IP 66 /68	(-) 40...(+) 200	132 x 104

Cover Seal : NBR Nitrile Rubber 120 °C, Opt. FPM (Viton) 200 °C)  
EU-Type Examination Certificate Number : TSE 22ATEX 0175U

The marking of the equipment :  II 2G Ex d IIC Gb  
II 2D Ex tb IIIC

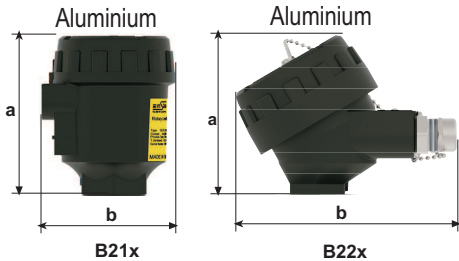



Protection Case :



Material : 304 Stainless Steel  
Welded manufacturing  
Opens - Closes Hinged  
To Protect Against external conditions.




2.7. Parts :

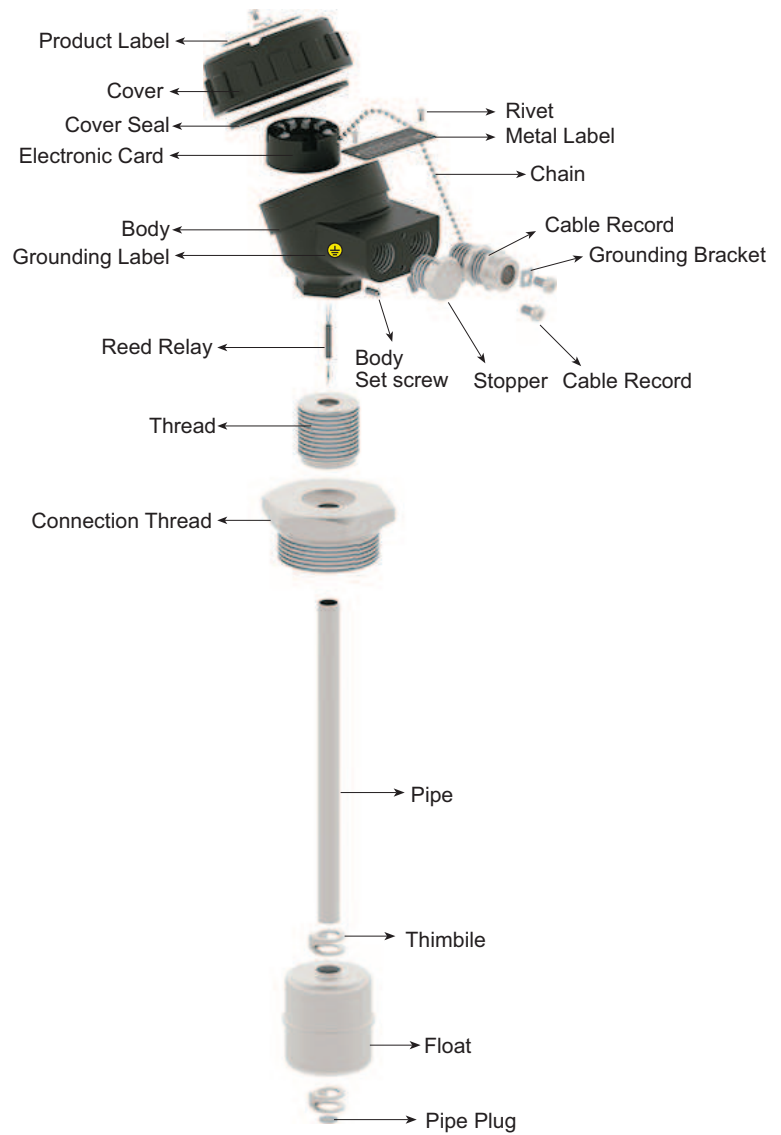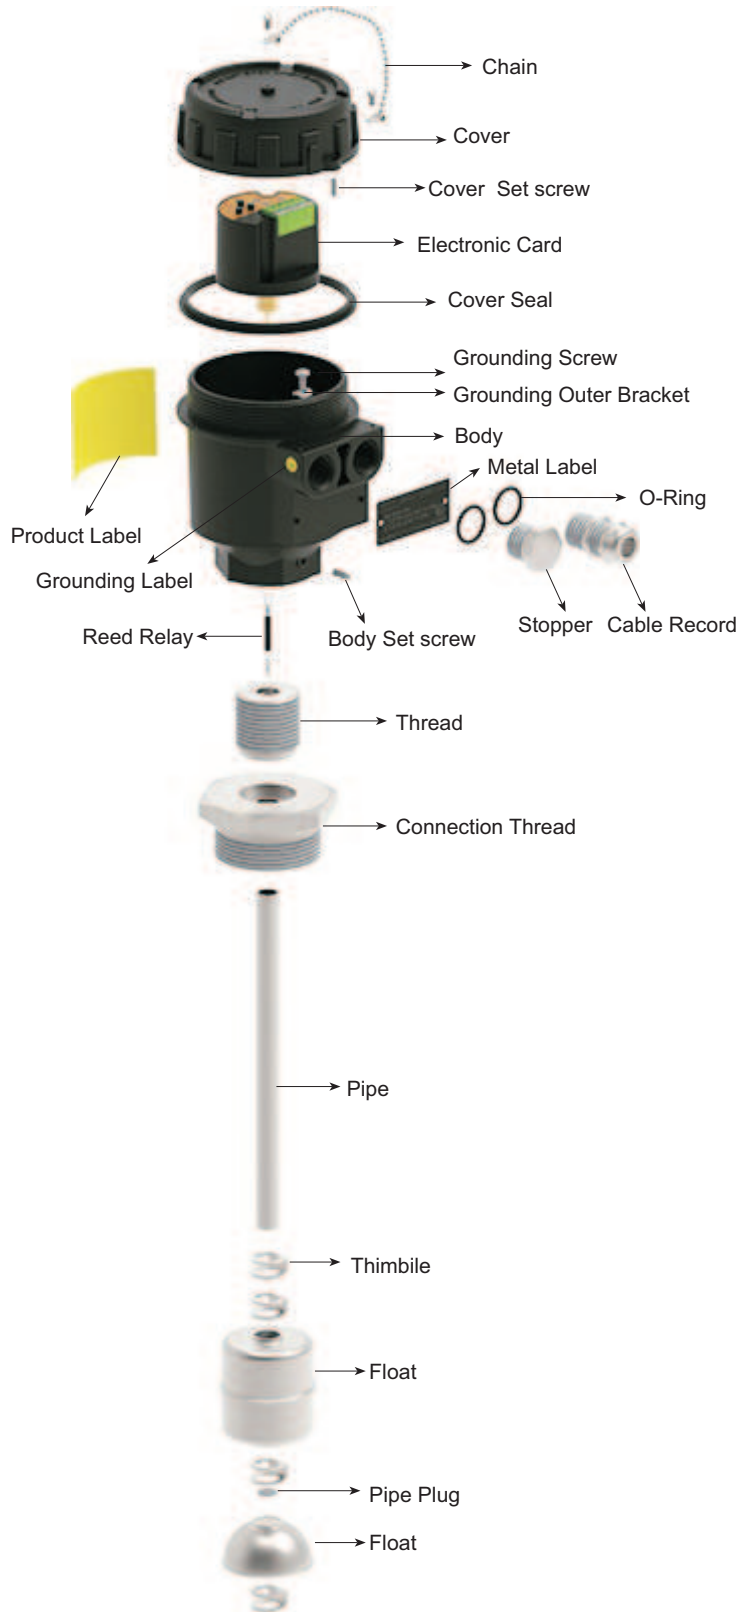

2.8. Electrical Installation


Make the electrical connection of the instrument according to details on its label, table and cable figures in this manual

For B21x

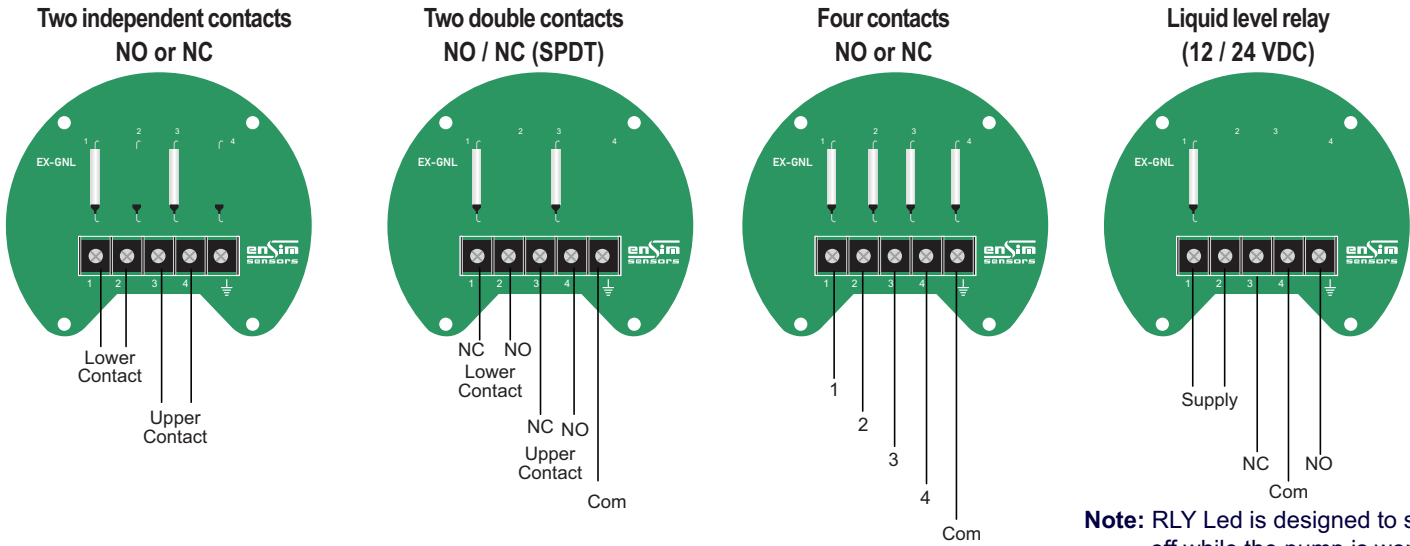

**Note:** RLY Led is designed to switch off while the pump is working.

For B22x

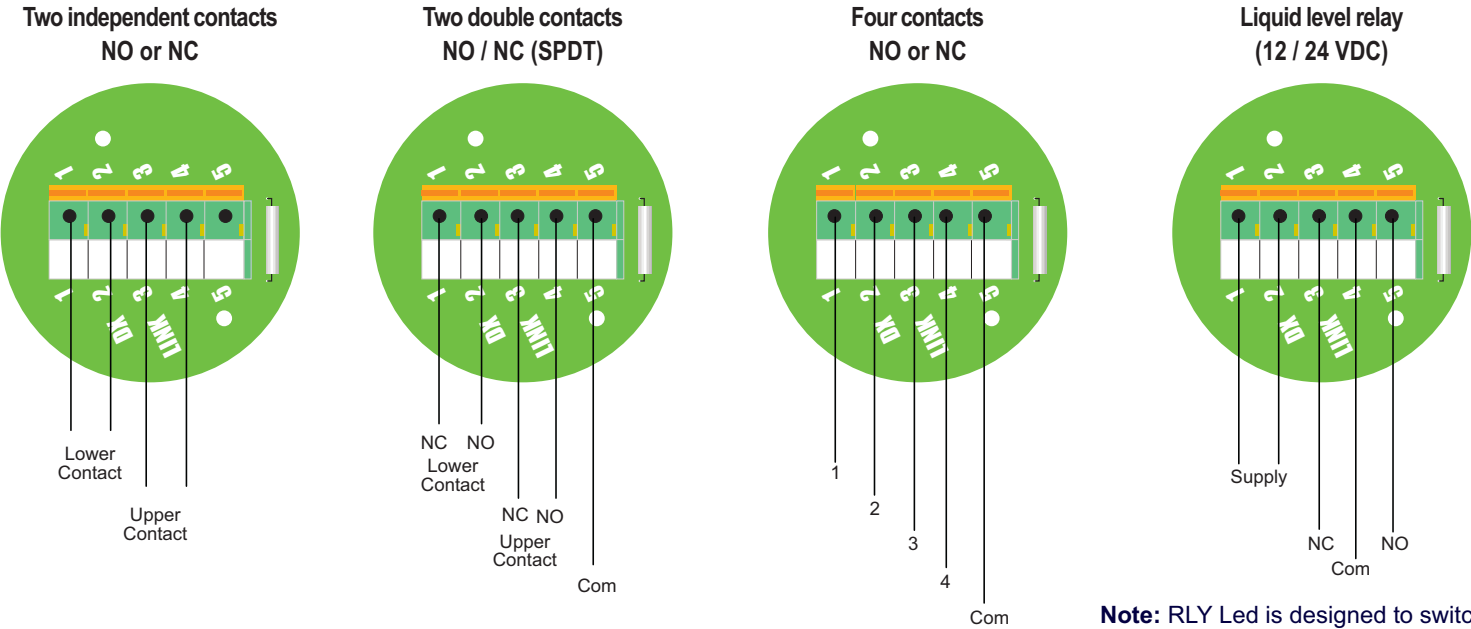


**Note:** RLY Led is designed to switch off while the pump is working.

**Note :** It has been produced according to IPC A 600 class 2 conditions and tested with 100 % E-test. Moreover, HASL (non-lead) surface test has been applied.

## Input Signals


### Channel 1

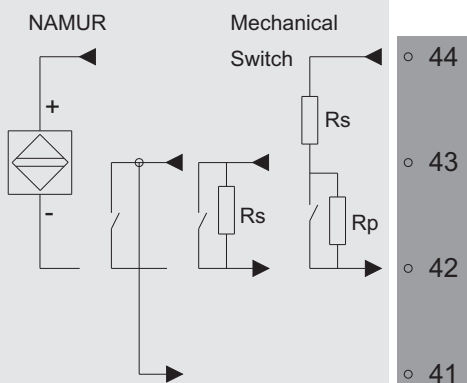

**Zone 0,1,2  
20,21,22,M1 &  
Cl. I/II/III, Div. 1  
gr. A-G**

**Zone 2 & Cl. 1,  
Div. 2, gr. A-D  
or Safe Area**

## Output Signals

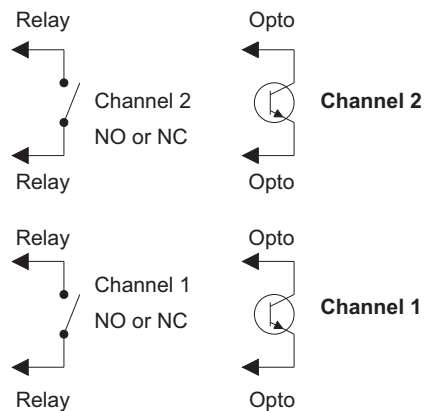

Power Rail

Status relay signal


Rail , Supply (+)

Rail , Supply (-)


No Connection

No Connection

### Channel 2

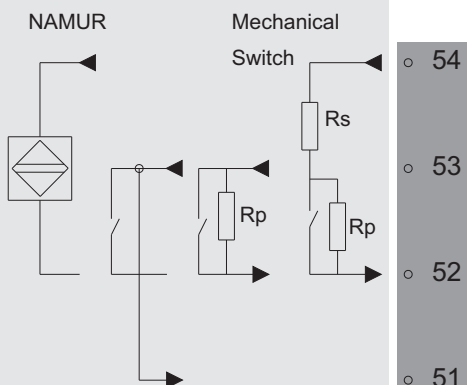


## Power Connection :

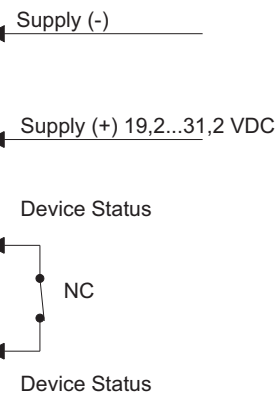


Supply via power rail


## 2.9. Float Types :

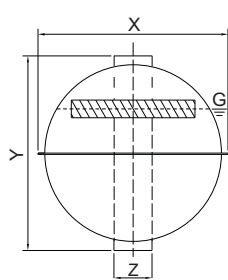


S2A / S5A / S6A  
S40A / S41A / S53A

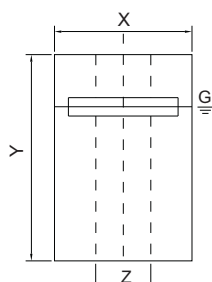


P3 / P6 / P7 P9

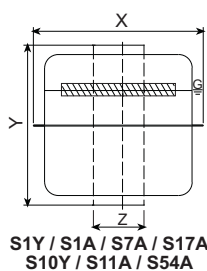

S1Y / S1A / S7A / S17A  
S10Y / S11A / S54A

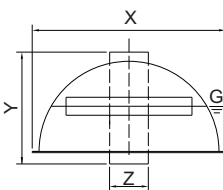


S42A / S52A

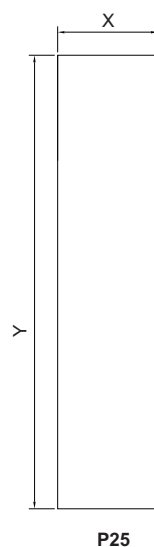

P25

**Minimum  
Distances**

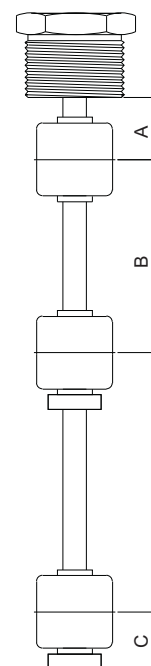


Order Code	Type	Material	X	Y	Z	Pipe Dia.	Max. Press.	Max. Temp.	Density	A	B	C
0001	S1Y	304 St. St.	28	28	9.5	8	10	150	0.80	25	50	25
0101	S1A	316 St. St.	28	28	9.5	8	10	150	0.80	25	50	25
0006	S10Y	304 St. St.	25,4	24,5	9.5	8	10	110	0,82	22	45	22
0110	S11A	316L St. St.	28,6	28	9.5	8	15	200	0,70	26	52	26
0102	S2A	316 St. St.	43	43	11	10	15	150	0.80	34	68	34
0104	S5A	316 St. St.	73	73	20	16	30	150	0.65	50	99	50
0105	S6A	316 St. St.	73	73	17	15	30	150	0.65	50	99	50
0106	S7A	316 St. St.	43	52	15	13	30	150	0.88	34	68	34
0111	S17A	316 St. St.	52	35	15	13	30	150	0.85	39	78	39
0113	S40A	316 St. St.	55	55	15	13	30	150	0.80	42	82	42
0114	S41A	316 St. St.	55	55	15	13	30	150	0,9	42	82	42
0115	S42A	316 St. St.	55	30	15	13	20	150	1,2	42	55	42
0118	S52A	316 St. St.	73	40	20	16	20	150	0,9	50	65	50
0119	S53A	316L St. St.	52,5	50,2	15,5	14	10	200	0,6	42	82	42
0120	S54A	316L St. St.	51	61,2	15,5	14	10	200	0,47	50	90	50
0228	S38A	316L St. St.	38	26	9,5	8	10	150	0,47	40	75	40


Order Code	Type	Material	X	Y	Z	Pipe Dia.	Max. Press.	Max. Temp.	Density	A	B	C
201	P3	PU	30	45	12	10	1	80	0.76	28	60	40
203	P6	PU	35	42	15	13	1	80	0.65	35	65	40
204	P7	PU	44	50	18	15	1	80	0.40	38	70	50
213	P9	PP	46	44	17	15	5	80	0.65	38	76	38
206	P25-1	PU	25	150	-	-	1	80	0.80	-	-	-
207	P13	PU	30	32	12	10	1	80	0.90	28	75	40

2.10. Sample Models


Housing - Thread (Std.)

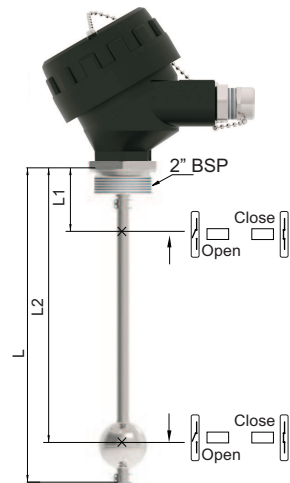


Housing - Flanged

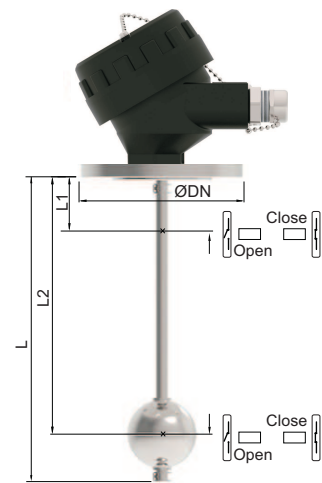



Housing Double Float

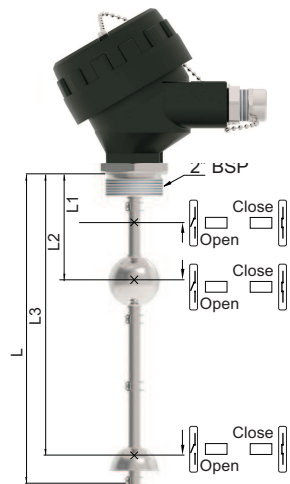

Housing - Thread

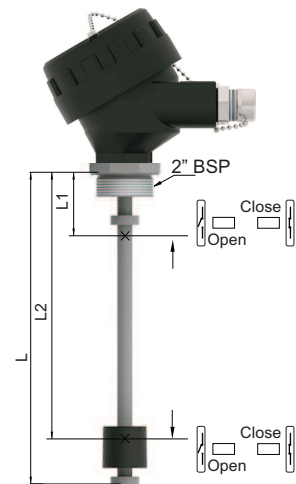

Sample Application :

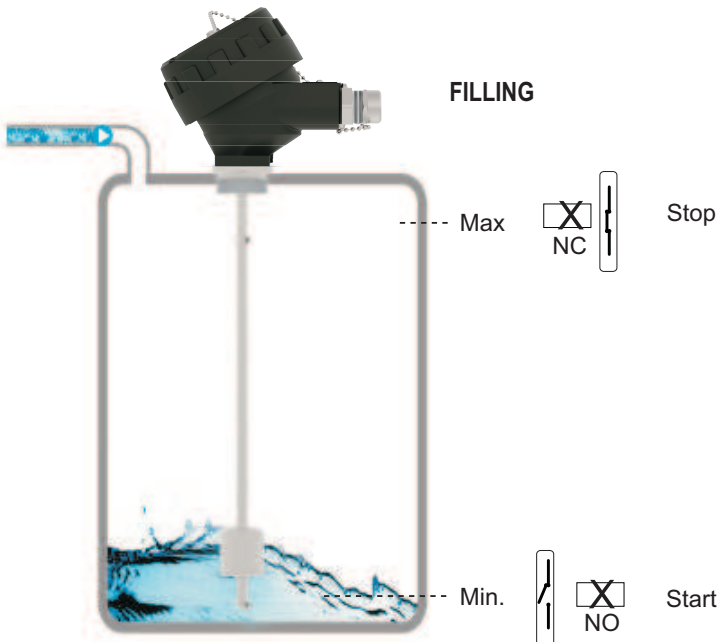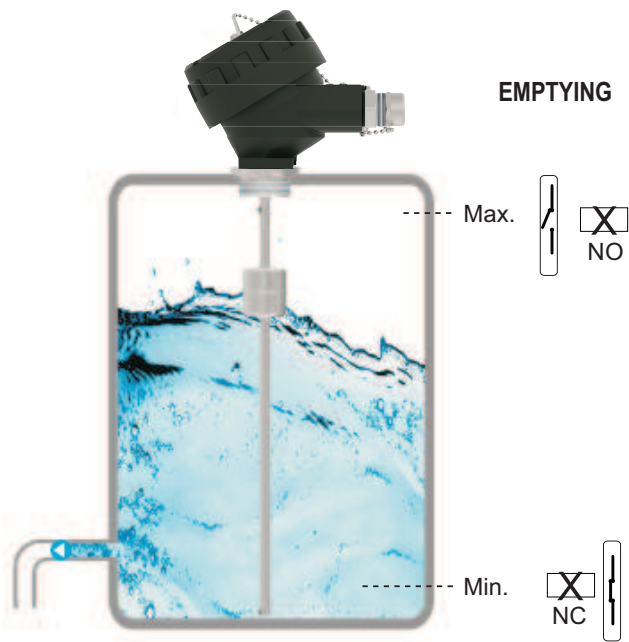

\*\* Length +/- 5 mm tolerance is available.

## 2.11.Maximum Surface Temperature

Temperature Class Table

(-) 20° C ≤ Ta Ambient ≤ (+) 30° C...(+ ) 60° C      Working Temperature: (-) 20°C ... (+) 125°C			Group II
MODEL			DX-ELS
Without opening the cover standby time			30 min.    (-)40...(+)150°C      40 min.    (-)40...(+)200°C
Ta AMBIENT TEMPERATURE	Tp PROCESS TEMPERATURE	TEMPERATURE CLASS	
60°C	< 80°C	T6	
60°C	< 90°C	T5	
60°C	< 125°C	T4	

(-) 20° C ≤ Ta Ambient ≤ (+) 30° C...(+ ) 60° C      Working Temperature: (-) 20°C ... (+) 60°C			Group III
MODEL			DX-ELS
Without opening the cover standby time			10 min.    (-)40...(+)60°C
Ta AMBIENT TEMPERATURE	Tp PROCESS TEMPERATURE	TEMPERATURE CLASS	
60°C	< 60°C	T6	

## 2.12. Order Form : Please consider sample models when coding

<b>1</b>	<b>MODEL</b>	
	Standard Version .....DX-ELS	
<b>2</b>	<b>HOUSING</b>	
	Aluminium Housing , B22x IP66/68.....750	Special.....x
	Aluminium Housing , B21x IP66/68.....704	
<b>3</b>	<b>CERTIFICATE</b>	
	No.....0	(EN10204-3-1) Material Certification.....1
<b>4</b>	<b>ELECTRICAL CONNECTION</b>	
	With Terminals.....00	Special.....x
<b>5</b>	<b>CONNECTION (Connection has been welded with sensor)</b>	
	Thread 3/8" BSP.....0003	1/8" NPT.....0200
	Thread 1/2" BSP.....0004	1/4" NPT.....0201
	Thread 3/4" BSP.....0005	3/8" NPT.....0202
	Thread 1" BSP.....0006	1/2" NPT.....0203
	Thread 1 1/4" BSP.....0008	3/4" NPT.....0204
	Thread 1 1/2" BSP.....0009	1" NPT.....0205
	Thread 2" BSP.....0012	1 1/4" NPT.....0206
	Thread 1/2" BSP (Moving Type).....0112	1 1/2" NPT.....0207
		2" NPT.....0208
	Thread 3/8" BSP Elbow Type.....0109	
	Thread 1/2" BSP Elbow Type .....0110	
		DN 25 - PN16 Flanged.....0502
		DN 32 - PN16 Flanged.....0503
		DN 50 - PN16 Flanged.....0505
		DN 80 - PN16 Flanged.....0507
		DN 100 - PN16 Flanged.....0508
		Special.....x
	<b>Note: Refer to the table for others.</b>	
<b>6</b>	<b>CONNECTION MATERIAL</b>	
	304 Stainless Steel.....001	Aluminium.....005
	316 Stainless Steel.....002	Special.....x
<b>7</b>	<b>PIPE SIZE</b>	
	Ø 10 mm.....10	Ø 12.7 mm.....12
	Ø 12 mm.....11	Ø 13 mm.....13
		Ø 15 mm.....15
		Special.....x

## 8 PIPE MATERIAL

304 Stainless Steel.....001	Special.....x
316 Stainless Steel.....002	

## 9 STEM LENGHT

.... mm

**Note: From connection thread included**

## 10a FLOAT MODEL

Select from Table.....

**Note: Should be selected according to the connection and radius.**

## 10b FLOAT NUMBER

Number / Piece.....

**Note: Should be selected according to the connection and radius.**

## 11 CONTACT NUMBER

Piece .....

**Note: From connection thread included**

## 11 DISTANCE (mm)

Lenght (mm).....

**Note: From connection thread included**

## 12 CONTACT STRUCTURE

NO Reed Relay.....06	NO / NC Reed Relay.....08
NC Reed Relay.....07	NO Hold Type Reed Relay.....09
	Special..... / x

## 13 OPTIONAL

No..... .0	Shetter (For the outside of the tank) 304 St. St...../ K2
Pt100 Sensor...../ P	Test Rod ..... / T
Liquid Level Relay...../ SSR	Float Housing... ..... / M
External Tank (Measurement must be specified) ... / H	Zener Baryer 9202B-BIB Single Channel...../B1B
	Zener Barier 9202B-B2B Double Channel...../B2B
	Special..... / x

## EXAMPLE

DX-ELS 750 - 0 - 00 - 0005 - 113 - 13 - 001 - 1500 - 1 - 10b - 11 -1400 - 08 / 0

DX-ELS Level Switch, Aluminium Housing B22x, 3/4" BSP Male Thread, Connection and Pipe Material 304 St.St.

L=1500 mm, S1Y Float , L1= NO / NC Reed Relay Output



## WARNING !!!




2.13. Please pay attention to following matters in order to operate your level switch properly.



Please do not mount slant way, otherwise switch do not work correctly.



Do not pull the cable strongly, otherwise the characteristics might be changed.

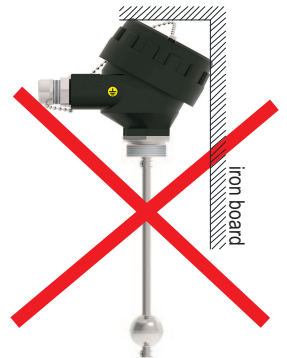


Please keep away from magnetic materials like iron board ; otherwise the characteristics might be affected



Please do not dip cables potting into liquids, otherwise insulation problem may cause.



Do not fasten switch reversely , otherwise its characteristics might be changed.

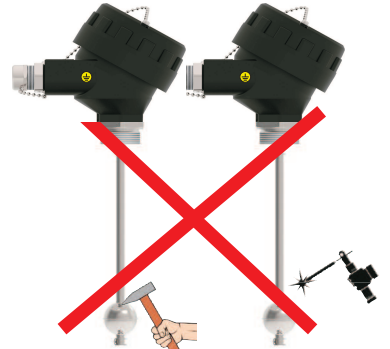


Please do not drop , otherwise the characteristics might be changed.




Vibration might be caused instability.



In case vapour splash cable potting points, insulation problem may cause.

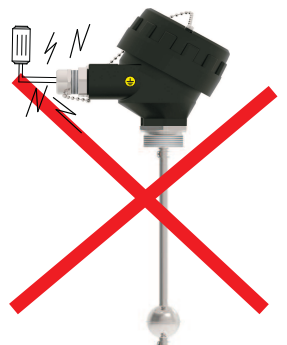

Excess current , to be drawn as a result of direct connection to motor, may burn relay of switch

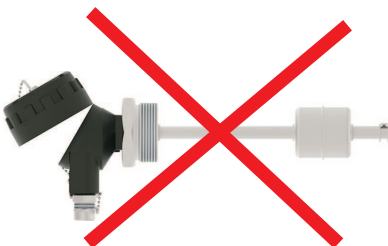

Do not remove the plastic parts of the bottom of the switch body , do not loosen.



Please avoid using with liquids which damage materials of parts ,otherwise quality can not be maintained accurately.



Do not connect the switch in reverse. Their characteristics may vary.

### 3. Failure Delection

Breakdown	Probable cause	Failure detection\correction
Fluid is leaking	There is a hole on the body.	-Check that is worked under appropriate condition and then contact with producer company.
It does not contact or it contacts continuously	-Socket connection is not touched. -Product was exposed to the magnetic field in the ambient. -Connetion angle is not correct. -Contact may have been burned.	-Check for socket connections. -The factor which constitutes the magnetic field should be removed or insulated. -Correct assembly angle. -Inform authorized service.
Body was broken	-Tightening the screws more than adequate during the assembly. -Product falling or taking a blow from outside.	-Inform authorized service.
Unsteady operation in the contact	-Product was exposed to the magnetic field in the ambient. -Product was exposed to vibration. -Product was exposed to high temperature.	-The factor which constitutes the magnetic field should be removed or insulated. -Vibration which will effect the product should be prevented or it should be attached to any place without vibration. -Use in the appropriate operating temperature.

If you find an error, try to eliminate it by using this table or send the instrument to our service address for repair.



The instrument should be repaired only by authorized service! Serial number shall be indicated to the authorized service center.

### 4. Disassembly of Instrument

Instrument should be disassembled while feeding and pressure is not available!

### 5. Service

The instrument does not require maintenance. If it is desired, residue accumulated inside should be blown according to kind of fluid and instrument can be cleaned with soft cleaning solutions. Measures should be taken during the disassembly.

### 6. Re-Calibration

During long period usage of level switch, there might be deviations on measurements. In those cases, recalibration is recommended. Re-calibration could be made by your technical staff or you could send to manufacturer company. According to IEC 60017, ex proof devices must be go through detailed inspection every 3 year from purchase date. Responsibility of inspections are belong to the user (IEC: International Electrotechnical Commission)

### 7. Repair – Manufacturer Address

If irreparable breakdowns occur, the instrument should be sent to us for repair purpose. Before this, the instrument should be cleaned carefully and packaged so as not to be broken. Furthermore, you should also add a detailed explanation which describes the breakdown while instrument is sent. If your instrument contacts with harmful substances, decontamination report should be also sent additionally. In the event that instrument does not have any decontamination report or our service department has doubts about instrument, repair process will not start until an acceptable report is sent.

If the instrument contacts with hazardous substances, necessary measures should be taken for decontamination!

Service -Manufacturer Company Name and Address:



**LONCA MAK. SAN. TİC. A.Ş. Ferhatpaşa Mah. Gazipaşa Cad. No: 104A Ataşehir - İSTANBUL - TÜRKİYE**

**Tel: +90 216 50 50 555 Faks: +90 216 515 45 84 E-Mail: lonca@ensim.com.tr Web: www.ensim.com.tr**

### 8. Disposal

The instrument should be disposed according to 2002/96/EC and 2003/108/EC European Directives (waste electrical and electronic instruments).

Waste electrical and electronic equipment should not be mixed with domestic wastes!



If the instrument has contacted with harmful substances, special attention should be paid for its disposal!



### 9. Terms of Warranty

The instrument has warranty legally for 24 months after delivery date. Warranty demands are not accepted in case of inappropriate operation, damage on the instrument or any modification on the instrument.

### 10. Terms of Return

In the return of materials, user should send an open list related to damage or problem, malfunction of the material to be returned or its operation in the different modification, with the instrument. If it is required to return the material, used in the dangerous, corrosive or toxic fluid, in this case, used part should be cleaned very carefully. Security of personnel should be ensured. All products to be returned should be sent to our company address, which we have stated.